


# FUSIBLES STANDARDS

## FUSES 'STANDARD'

Pour tension nom. jusqu'à *for nominal* 32V

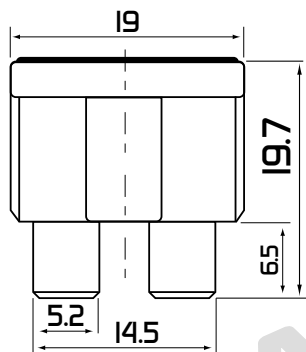

Pour tension nom. jusqu'à *for nominal* 32V

1A	<b>R1070</b>
2A	<b>R1068</b>
3A	<b>R1069</b>
4A	<b>R1071</b>
5A	<b>R1061</b>
7,5A	<b>R1060</b>
10A	<b>R1062</b>
15A	<b>R1063</b>
20A	<b>R1064</b>
25A	<b>R1065</b>
30A	<b>R1066</b>
40A	<b>R1067</b>

Pour tension nom. jusqu'à *for nominal* 80V

3A	<b>R1069/80</b>
4A	<b>R1071/80</b>
5A	<b>R1061/80</b>
7,5A	<b>R1060/80</b>
10A	<b>R1062/80</b>
15A	<b>R1063/80</b>
20A	<b>R1064/80</b>
25A	<b>R1065/80</b>
30A	<b>R1066/80</b>



R1072  
Porte fusible pour Fuse holder for fusible standard

### R 1197

Boîte de 80 fusibles Standards  
Box of 80 fuses Standard

Composition de la boîte *Contents of box* :

Version 2A	<b>R1068</b>	x 5
Version 3A	<b>R1069</b>	x 5
Version 4A	<b>R1071</b>	x 5
Version 5A	<b>R1061</b>	x 10
Version 7,5A	<b>R1060</b>	x 10
Version 10A	<b>R1062</b>	x 10
Version 15A	<b>R1063</b>	x 10
Version 20A	<b>R1064</b>	x 10
Version 25A	<b>R1065</b>	x 10
Version 30A	<b>R1066</b>	x 5

### R 1195

Boîte de 120 fusibles Standards  
Box of 120 fuses Standard

Composition de la boîte *Contents of box* :

Version 3A	<b>R1069</b>	x 15
Version 5A	<b>R1061</b>	x 15
Version 7,5A	<b>R1060</b>	x 15
Version 10A	<b>R1062</b>	x 15
Version 15A	<b>R1063</b>	x 15
Version 20A	<b>R1064</b>	x 15
Version 25A	<b>R1065</b>	x 15
Version 30A	<b>R1066</b>	x 15



Fiche Info